
ElmScan 5 Jumper Diagram

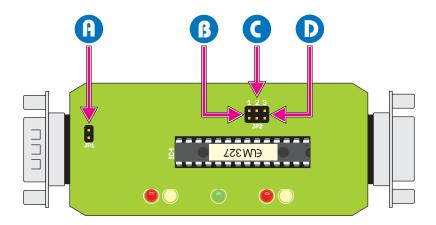

State of chassis (pin 4) and signal (pin 5) ground lines
ON: chassis and signal grounds connected
OFF: chassis and signal grounds not connected

Default LF Mode

ON: responses terminated with CR and LF OFF: responses terminated with CR

Baud Rate

ON: 38400 baud **OFF:** 9600 baud

Memory

ON: Memory function disabled **OFF:** Memory function enabled